

Vehicle Protection Plans

POWERTRAIN

ENGINE GAS

Camshaft Cam Bearings Push Rods Rocker Arms Connecting Rods Pistons Piston Rings Wrist Pins Hydraulic Valve Lifters Timing Chain & Gears Crankshaft Main Bearings Oil Pump Oil Pan

FLUIDS & FILTERS

Are covered only when required in conjunction with a covered component failure and repair

SUPERCHARGER

Steel lines

Compressor

Condenser

Receiver drier

Accumulator

Orifice tube.

Fan blade

Fan clutch

Water pump

Radiator

the

Fittings & hoses

Single / Twin / Turbo (OEM Only) Surcharge applies All internally lubricated parts contained within the turbo/ supercharger housing

AUTOMATIC TRANSMISSION

All internally lubricated parts (excluding electronics) Pump & pump housing Carrier assembly

AIR CONDITIONING (OEM)

Compressor clutch & pulley

A/C FLUIDS & FREON

covered component).

COOLING SYSTEM

Thermostat & gasket

Electric cooling fan motor

Included (only in conjunction with

replacement or repair of an A/C

Planetary gears Drums Valve body Reaction shaft Governor Servo assembly

Torque converter MANUAL TRANSMISSION

All internally lubricated parts Main shaft Counter shaft Input shaft Synchronizers Gears Shift fork & internal bearings.

Coolant recovery container unit

HIGHTECH ELECTRICAL

Power seat motors & switches

Power antenna motor & switches

Power window motors & regulators

Electronic ignition module Power sun roof motor & switches

Power door lock actuators

Front wiper motor & switch

Electric horn(s) & horn relay

ABS & BRAKES SYSTEM

Front & rear wheel cylinders

Stop lamp switch

Voltage regulator

Master cylinder

Disc brake calipers

Starter drive assembly

Starter motor

Solenoid

Alternator

Front washer pump & switch

*Includes all covered components under Powertrain with the addition of the following:

(Manual clutch & related components are not covered).

REAR AXLE ASSEMBLY

Ring & pinion gears All internally lubricated parts contained within the rear end assembly and case (if damaged by an internally lubricated part).

4X4 ALL WHEEL DRIVE

Wheel speed sensors

Steel lines & fittings

Pressure modulator valve

Rack & pinion assembly

Upper & lower ball joints

Front & rear axle shafts

Constant velocity joints

Front & rear wheel bearings

(only if boots are not torn or

Front & rear leaf & coil springs

(Exclusions are: rotors, drums, pads

STEERING & SUSPENSION

All internally lubricated parts

Power steering pump & housing

contained within the steering gear

Accumulator

& linings).

box

leaking).

Included Transfer case and all internally lubricated parts and all internally lubricated parts contained within the differential housing.

PLUS

SENSORS

Oxygen sensor Map sensor Mass air flow sensor

ENGINE PLUS

Distributor housing & shaft Timing belt & timing belt tensioner Timing chain cover Timing belt covers Oil pressure sending unit Cylinder block Cylinder head(s)

SEALS & GASKETS

Cylinder head gaskets & intake manifold gaskets are covered components. (All other seals and gaskets are covered only in conjunction with a covered component failure).

FUEL SYSTEM

Primary electric fuel pump

ENHANCED

ENHANCED SENSOR PACKAGE

Fuel injection sensor Throttle position sensor Coolant sensor Crank sensor Camshaft sensor Air intake Temperature sensor Knock sensor Vehicle speed sensor

FUEL DELIVERY SYSTEM

Air injection pump Fuel injectors Metering valve Fuel gauge sending unit Fuel float Fuel tank (if tank is not corroded).

ENGINE

Harmonic balancer Flywheel Flex plate Flywheel cover *Includes all covered components under Powertrain and Plus with the addition of the following:

Exhaust manifolds & gaskets Solid rubber engine mounts

ENHANCED ELECTRICAL (PCM)

Powertrain control module Air suspension relay Cruise control module Cruise control servo Cruise control switch Power trunk motor assembly Power trunk closer & switch Power convertible top motor & switch,

Garage door opener (OEM) Power mirror motors & switches Rear wiper motor & switches Rear washer pump & switch Headlight switch Headlight dimmer switch Ignition key lock cylinder switch Turn signal relay & switch

AIR CONDITIONING

Expansion valve

POA valve High & low compressor cut off switch Pressure cycling switch & evaporator.

HEATING & COOLING

Heater core Blower motor Heater control valve Manual dash heater control unit.

AUTOMATIC TRANSMISSION

Externally mounted solenoids Encoder motors Vacuum modulator Transmission cooler (OEM) Solid rubber mounts.

ABS & BRAKES SYSTEM

Electronic control processor Vacuum assist booster Hydraulic pump/motor assembly & isolation dump valve.

SUSPENSION

(only if broken).

McPherson struts Strut bushings (air struts excluded) Tie rod ends & sleeves Idler arm Pitman arm King pin Center link Upper & lower controls arms & bushings Front & rear sway bars & bushings EXTERIOR

Door lock cylinders Trunk lock cylinders Door hinges Manual parking brake cables Hood hinges Hood latch Hood release cable Hood Trunk & rear hatch hydraulic lift supports Trunk & rear hatch hinges